

# **3D 1280P HD MEDIA PLAYER**

**MODEL No.: HD-3507**

## **USER MANUAL**

# Table of contents

1. Introduction.....	1
1.1 Preface.....	2
1.2 Package Contents.....	3
1.3 Caution.....	3
2. About the Player.....	4
2.1 Product Overview.....	5
2.2 Connection.....	6
2.3 Use Media Device.....	9
2.4 Remote Control.....	10
2.5 First Time Operation.....	1
3 Setup Menus.....	2
3.1 General setup.....	4
3.2 Video setup.....	6
3.3 Exit Setup.....	7
4 Media Playback.....	12
4.1 Video List.....	13
4.2 Music List.....	14
4.3 Photo List.....	15
4.4 Browser.....	16
5 Appendixes.....	18
5.1 Specifications.....	19
5.2 Frequently Asked Questions.....	20

# 1. Introduction

## 1.1 Preface

Dear Customer,

Thank you very much for purchasing the products. In the digital era, this product is a great home entertainment partner. With the outstanding design, you can enjoy movies and music, and view photos of precious moments.

This player has the following functionality:

Video Decoder:

MPEG1: (Max Bitrate 100Mbps)

MPEG2: (Max Bitrate 100Mbps)

MPEG4-XVID: (Max Bitrate 100Mbps)

DIVX: (Max Bitrate 100Mbps)

H.264: (Max Bitrate 70Mbps)

H.263: (Max Bitrate 100Mbps)

WMV9/VC-1 (Max Bitrate 100Mbps)

RMVB (Max Bitrate 100Mbps)

Max Frame Rate: 30fps

Max Resolution: 1920 x1280

Video File Format:

MKV, MP4, VOB, RM/RMVB, MPG, M2TS, FLV, AVI, ASF, TS/TP, MP4/M4V, MOV, WMV

Subtitle supported –SRT, ASS, SSA, SUB, SMI format

Music Playback - Mp3 WMA OGG FLAC (Lever0 – Lever8) APE AAC  
AC3 (Ac3 only) ATRA DTS (Dts only)

Photo Playback - JPEG PNG BMP GIF

- supports slide show mode, rotate, zoom function.

Media Device - supports external USB HDD or U disc and SD/MMC memory card

We hope that this product will bring you a lot of enjoyment. We are committed to apply multimedia technology in your work, entertainment, family, daily life and everywhere!

Welcome to us. Thank you again for choosing our product.

## 1.2 Package Contents

Upon opening the shipping box, you should find the following items:

Note:

The actual contents in the package might be different from the above list sheet in this manual.

## 1.3 Caution

This player's design and manufacture has your safety in mind. In order to safely and effectively use this player, please read the following before usage.

### 1.3.1 Power

The player's power voltage: 100-240V AC

When using this player, please connect the power cable to the player's power jack to the power supply. When placing the power cable, make sure it can not get damaged or be subject to pressure. To reduce the risk of electric shock, unplug the adapter first before cleaning it. Never connect the player in a humid or dusty area.

### 1.3.2 Radio interference/compatibility

If not properly shielded, almost all electronic devices will get radio interference.

Under some conditions, your player might get interference. The design of this player has followed the FCC/CE standard, and has followed the following rules:

This player may not cause harmful interference;

This player could accept some interference received including interference that may cause undesired operation.

### 1.3.3 Repair

If the player has a problem, you should take it to an appointed repair center and let the specialists do the repair, never repair the player yourself, you might damage the player or endanger yourself or your data.

### 1.3.4 Disposing of the player

When you dispose of the player, be sure to dispose it appropriately. Some countries may regulate disposal of electrical device, please consult with your local authority.

### 1.3.5 Others

When using this player, please do not let the player come into contact with water or other liquid, if water is accidentally spilled on the player, please use a dry cloth to absorb the spillage. Electronic products are vulnerable, when using please avoid shaking or hitting the player, and do not press the buttons too hard. Do not let the player come into contact with water or other liquid.

Do not disassemble the player; repair the player or change the design of the Player, any damage done will not be included in the repair policy.


Do not press the buttons of the player too hard.

Avoid hitting the player with hard object, avoid shaking the player, and stay away from magnetic fields.


During electrostatic discharge and the strong electromagnetic field, the product will malfunction, and then unplug the power cable and the product will return to normal performance next time it is powered on.

## 2. About the Player

### 2.1 Product Overview

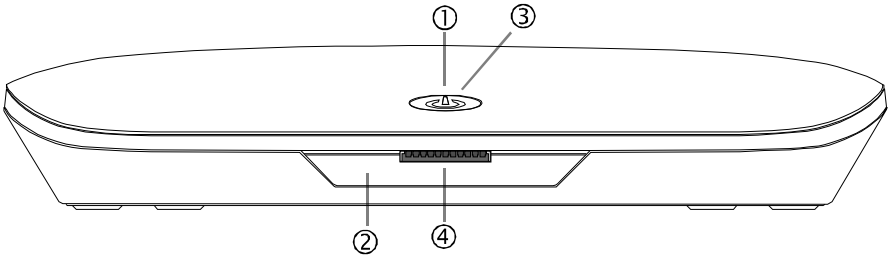


Item	Name	Description
1	Power on/off	Power on/off, long press to power off.
2	IR reciver	Remote must be toward IR reciver
3	Indicatory Light	Working or standby
4	SD card slot	Insert SD card into this slot

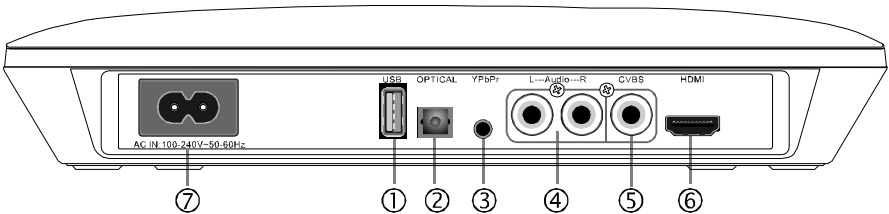

Item	Name	Description
1	USB	USB jack
2	OPTICAL	Digital audio signal output
3	YPbPr	YPbPr output
4	R-Audio-L	Stereo audio output
5	CVBS	CVBS output
6	HDMI	HDMI jack
7	AC IN	AC in jack for power connection

## 2.2 Remote Control

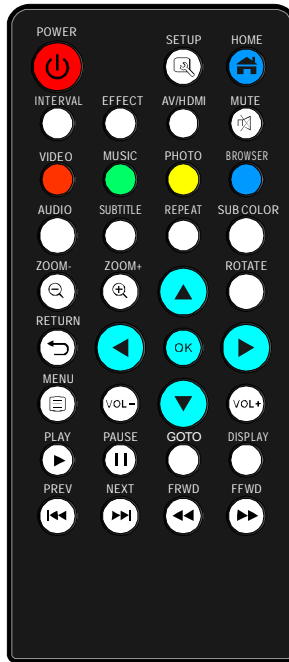

### 2.2.1 Remote control functions

Item	Key name	Description
1	Power	Power on/off
2	Setup	Enter setup menu
3	Home	back to main menu
4	Interval	Select interval mode during photo slide show
5	Effect	Select effect mode during photo slide show
6	AV/HDMI	Toggle between AV output or HDMI output
7	Mute	Mute volume
8	Video	Enter video files list
9	Music	Enter music files list
10	Photo	Enter photo files list

11	Browser	Enter Browser list
12	Sound	Toggle between available audio channels
13	Subtitle	This button toggles between available subtitle languages
14	Repeat	Select repeat mode
15	Sub color	Select subtitle color
17	Zoom-	Zoom out
18	Zoom+	Zoom in
19	Up	Cursor up/ move up one entry
20	Rotate	Rotate the photo display
21	Return	Back to parent menu
22	Left	Cursor left/ Skip up one page or back to top of page
23	Ok	Confirms selection of an item in the menu or start playback
24	Right	Cursor right/ Skip down one page or bottom of last page
25	Menu	Press to display operate menu during playback
26	Volume-	Press to decrease the volume
27	Down	Cursor down/ move down one entry
28	Play	Press to increase the volume
29	Volume+	Start to playback
30	Pause	Press to pause playback, and press again to resume
31	Goto	Select the Mark time and press Ok button to start playback at that point
32	Display	Toggle between time counter on/off when playback
33	Prev	Go to previous file
34	Next	Go to next file
35	FRWD	Fast reverse during playback
36	FFWD	Fast forward during playback

## 2.4.2 Replacing the Remote Control Battery

Remove the battery compartment cover by pulling the cover in the direction of the arrow.

Remove the battery.


Insert two batteries (size AAA) making sure that the + and – ends of the batteries are matched to the +/– marks printed inside the battery compartment.

Reload the cover.

### **Note:**

Dispose of used batteries according to local ordinance regulations.

Remove the battery when not using the PLAYER for prolonged periods.

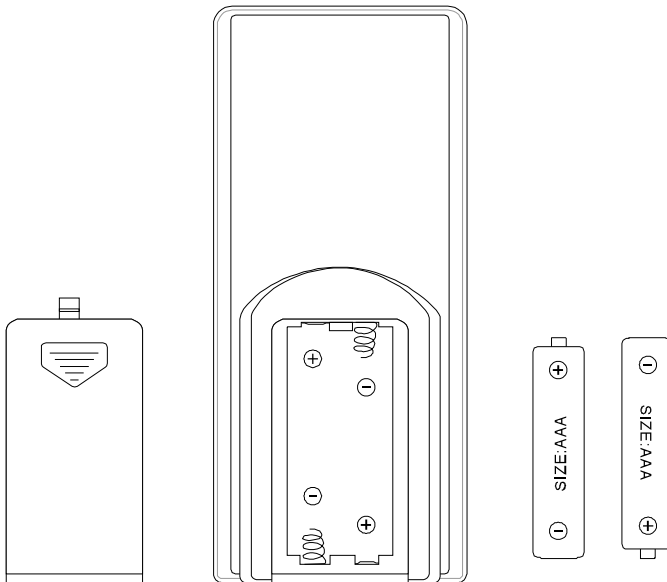


## 2.3 Connection

### 2.3.1 HDMI OUT

Follow the picture and plug one connector on your HDMI cable to the player's HDMI jack;

 Follow the picture and plug the other connector on your HDMI cable to the TV's HDMI jack.

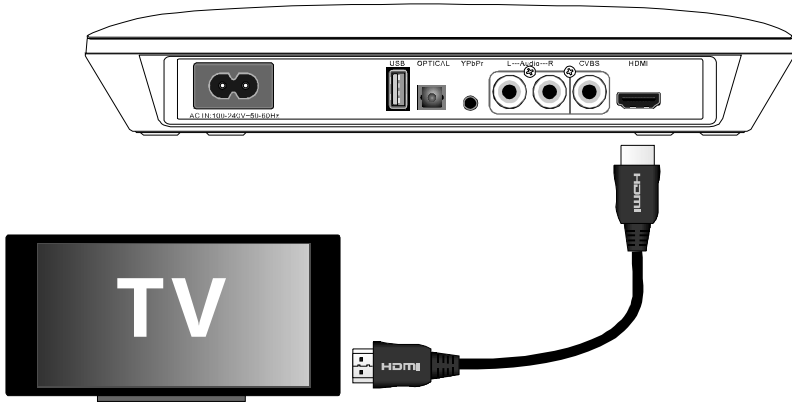


In this way, you can have the highest quality video and audio via a single cable.

### 2.3.2 A/V OUT

 Follow the picture and plug in the 3 color (red/white/yellow) connector to the player's A/V OUT jack;

Follow the picture and plug in the 3 color connector to the TV's A/V IN jack.

In this way, you can enjoy the content in the player on TV or other display devices.

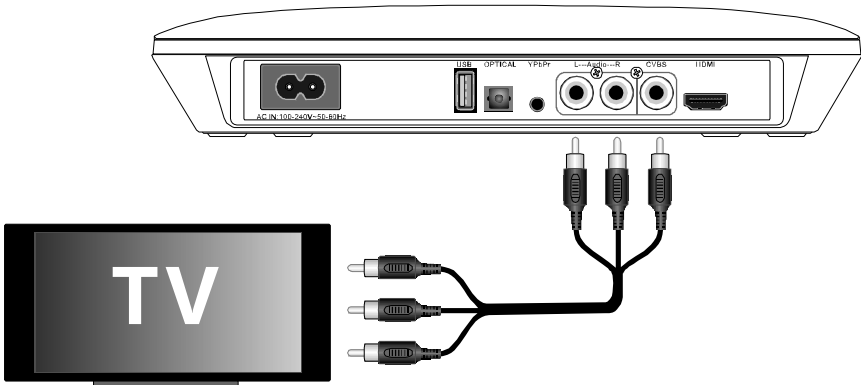

### 2.3.3 Y/Pb/Pr Component OUT

 
Follow the picture and plug in the 3 color (green/blue/red) connector to the player's Y/Pb/Pr jack;

Follow the picture and plug in the 3 color connector to the TV's YPbPr jack.

Audio Connection while using YPbPr Video out:

First method: use the audio output from the A/V OUT jack;


Second method: use the audio output from the S/PDIF Coaxial or Optical jack.

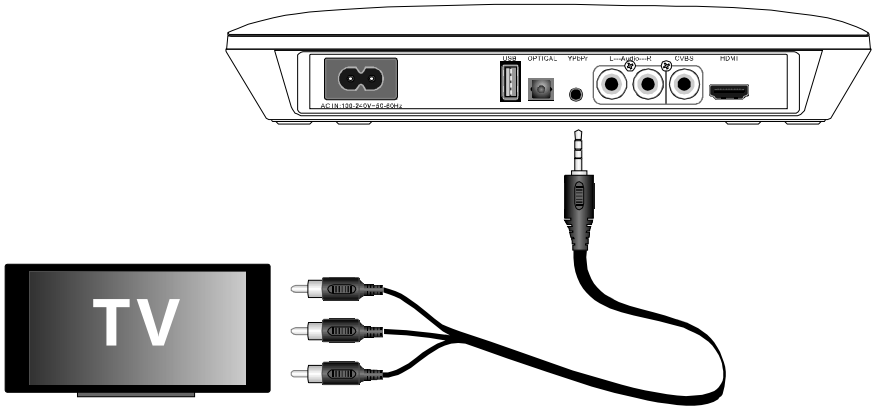

In this way, you can also enjoy videos, music, and photos in the player on TV.


### 2.3.4 Digital Audio Device connection

 Follow the picture and plug in the connector on your optical fiber to the player's S/PDIF Optical jack; Follow the picture and plug in the other connector on your optical fiber to the digital audio device.

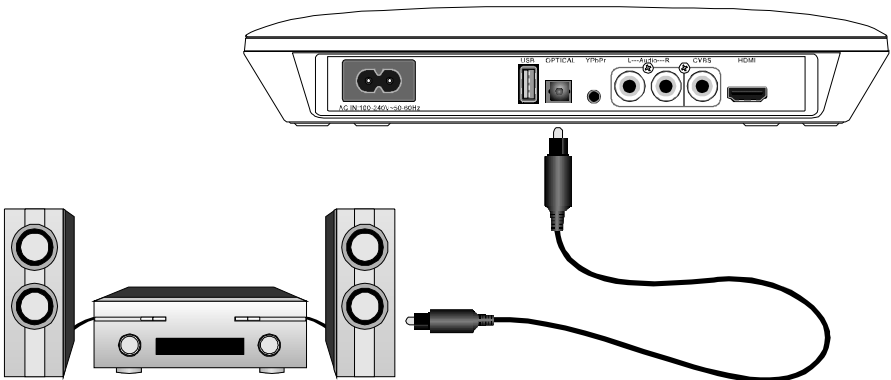

### 2.3.5 Power connection

 Follow the picture and Plug in the power cord to the player's AC IN jack;  
Follow the picture and plug in the power cord to the power outlet.

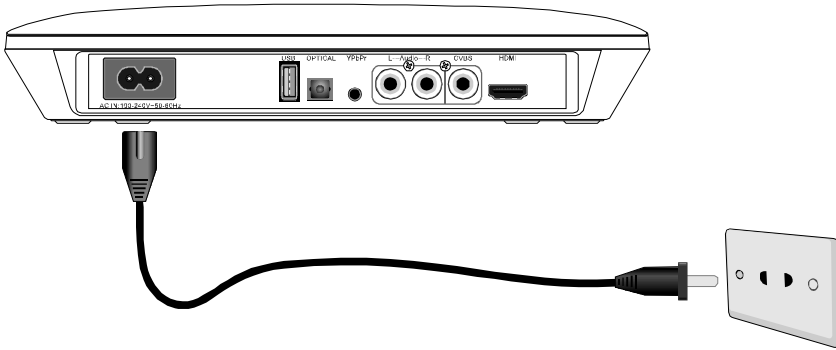


## 2.4 Use Media Device


### 2.4.1 USB Mass Storage Device Connection

(like USB Pen Drive, MP3, USB HDD etc.)

 Make sure the player is powered on;  
Plug in the USB Pen Drive or USB HDD etc. to the USB HOST port of this player.

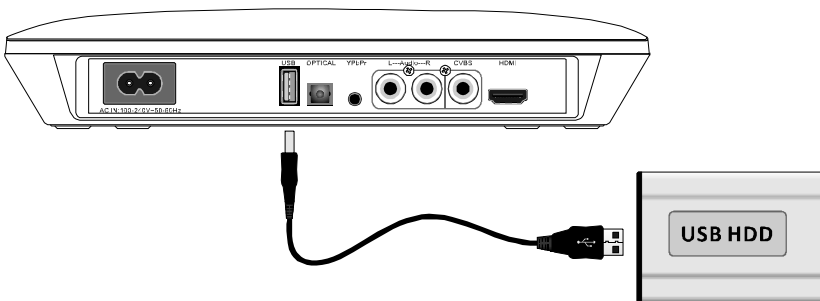

## 2.4.2 Using Multiple Memory Cards

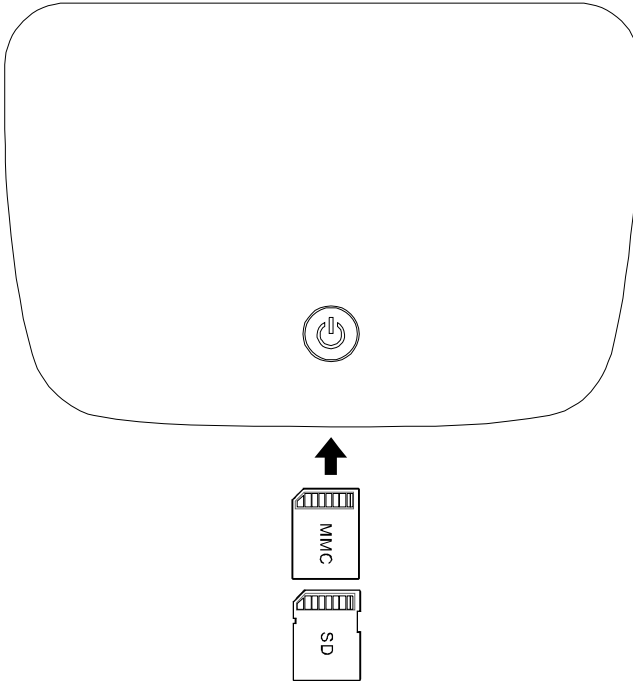 

### Note:

- 1.If the PLAYER does not detect your memory card, try turning the PLAYER power off then try again.
- 2.If you do not see your files in the proper order when viewing them on the TV display, try reformatting your memory card. This will reinitialize the memory card' s internal tables.
- 3.Most but not all memory cards are compatible with the PLAYER. Incompatibilities can arise due to the age of the memory card or the technology within it. Overall, name brand cards work the best.
- 4.Memory cards can ONLY be inserted one way. If you find that the memory card does not fit, please do not force it. Pull the memory card out and check to see that you have the card in the proper position before you reinsert it. You can also try turning the card around.

### Caution:

Do not unplug the memory card when PLAYER playing a file from the

## 2.5 First Time Operation

To setup your Media player, please use the following instructions:

1.Connection TV

2.Plug the power cord into the AC power brick then plug one end of the power supply into the AC JACK of player and the other end into a power outlet. Then press the power key.

Once you have photos, videos, or music on the memory card or U disk, insert the card into the proper slot or plug in U disk to USB jack. If the player with U disk/USB HDD, SD/MMC card at same time please press SOURCE on remote control to choose go to which media device.

After the device is selected, the main interface will be display.

## 3. Setup Menus

The setup menu allows you to configure system settings. Press the SETUP button on the remote control to enter this menu, and use the navigational buttons to select items or options. Press OK to confirm setting.

Video output:PAL NTSC HDMI720P

Audio Select:Nomal Spdif

Language:English

Auto off:5s 10s 20s 30s 1m 5m

Key tone:on/off

Version:1.4 2010.06.15

Restore Default:PAL NTSC HDMI720P








## 4. Media Playback

### 4.1 Video List

Select the VIDEO icon on the main interface and press OK button to enter this menu, then select media source and press OK button to select media type and all of the supported video files stored on the device will be displayed.

Press the UP/DOWN button to select a video file you wish to play, and press the OK or PLAY button to begin the playback

Press MENU button to display operate menu during playback, the icon of operate menu will be show on the bottom of TV display. Press LEFT/RIGHT button to select icon then press OK button to open operate menu.






Icon	Description Or Sub Menu
	Back to current playback
	Select sound channel, for exampl:track3
	Select subtitle from subtitles list
	Display mode:video full screen/screen full screen/default/4:3 /16:9/fit view
	Repeat mode:only once/rotate one/rotate all/sequence /random
	Sound system:stereo/left channel/right channel
	Select color of underline for subtitle:default/red/blue

## 4.2 music List

Select the music icon on the main interface and press OK button to enter this menu, then select media source and press OK button to select media type and all of the supported music files stored on the device will be displayed.

Press the UP/DOWN button to select a music file you wish to play, and press the OK or PLAY button to begin the playback

Press MENU button to display operate menu during playback, the ico of operate menu will be show on the bottom of TV display. Press LEFT/RIGHT button to select ico then press OK button to open operate menu.










 
 




Icon	Description Or Sub Menu
	Back to current playback
	Repeat mode:only once/rotate one/rotate all/sequence /random
	EQ mode:nature/DBB/POP/rock/classic/jazz/vocal/dance
	select witch one will be show:spectrum/lyric
	Select color of underline for lyric:blue/red/yellow/green /orange

### 4.3 Photo List

Select the photo icon on the main interface and press OK button to enter this menu, then select media source and press OK button to select media type and all of the supported photo files stored on the device will be displayed.

Press the UP/DOWN button to select a photo file you wish to play, and press the OK or PLAY button to begin the playback

Press MENU button to display operate menu during playback, the ico of operate menu will be show on the bottom of TV display. Press LEFT/RIGHT button to select ico then press OK button to open operate menu.

Icon	Description Or Sub Menu
	Back to current playback
	Slideshow or display single photo file
	        zoom in/out    rotate CCW/CW    move up/down    move left/right
	select witch one will be show:spectrum/lyric
	Slideshow mode:persian blinds H/persian blinds V/mosaic /random-switch/default
	Interval time:1s/3s/5s/10s/30s
	Repeat mode:seq next/seq pre/random switch

## 4.4 Browser

Select the Browser icon on the main interface and press OK button to enter this menu, then select media source and press OK button to select media type, and all folders and all of the supported photo files stored on the device will be displayed.

Press the UP/DOWN button to select a folder the press OK button to open the folder. Press the UP/DOWN button to select a photo file you wish to play, and press the OK or PLAY button to begin the playback

# 5. Appendixes

## 5.1 Specifications

Item	Description
Dimension	L250mm x W145mm x H42mm
wight	250g
Operating Temp	-20~ +40 C
Power Rating	15W
Power	AC100-240V
Video	Format: AVI, MKV, MP4, RM, RMVB, FLV, ASF
	Resolution: Up to 1920x1280p
	Subtitle: SRT, SSA, SMI
Music	Format: MP3, WMA, FLAC, APE, OGG, AAC
	Compression rate: MP3: 32 Kbps~ 320 Kbps; WMA: 32 Kbps~ 192 Kbps
Photo	JPEG, PNG, GIF, BMP
	Slide Show support, Zoom Rotate
Video Output	Composite, Component, HDMI (Version 1.1) up to 1080P/60HZ
Audio Output	Stereo RCA, HDMI, SPDIF Optical
TV System	PAL, NTSC, 720P, 1080I, 1080P/24HZ, 1080P/50HZ, 1080P/60HZ
USB Interface	USB 2.0 high speed port x 1
File System	FAT, FAT32, NTFS
Memory Cards	SD/MMC
USB Device	Up to 2T disk capacity

## 5.2 Frequently Asked Questions

1. My videos don't play at full screen. What could be the problem?

Many AVI file is different resolution, Please check your video's resolution and make the appropriate adjustments.

2. What is the largest memory card you support?

Generally, now our PLAYER compatible with brand card in market with multi memory size, such as 1G/2G/4G/8G/12G memory cards work fine.

3. I see an icon like a hand on the top left position of the monitor display and the remote will not respond right away. What is the problem?

If you see the hand icon, your PLAYER is busy or the button you pushed does not apply to the mode you are in. If your PLAYER does not respond right away to a button push, please wait a few seconds. Most likely, the PLAYER is busy processing files and will respond once it is ready.

4. Can I store and use photos, video, and music on the same memory card?

Yes. When you have multiple media types on a memory card, we recommend you put these into separate folders for easier management.

5. Can I play the content of just one folder?

Yes. Press LEFT/RIGHT button to select the Browser icon on the main interface to enter this menu, press UP/DOWN to select the folder you would like to play. Once you are inside that folder, press OK button to start play, press the REPEAT button to toggle the repeat folder option.

6. I cannot hear sound, or the noise is too loud.

Check whether the volume is set to "0". Check whether the AV cable is properly connected to the port. Check whether the media file is damaged.

Why I cannot find my DVD movie from video list?

DVD movie only can access from Browser file list. Pls. go to Browser, refer to 4.4.2

8. Why I connect VP3300 with amplifier to enjoy DVD with AC3, there is no surround sound?

Pls. Go to go to Setup-General Setup-Video Setup-Audio-SPDIF RAW

Pls. Remember to change SPDIF RAW to Analog if you don't use amplifier

why I cannot get music slideshow function

Music slideshow function only can access from Browser file list. Make sure your photo folder already with music files, Pls. go to Browser file list, go to photo folder, cursor highlight photo, then press M-Slide, refer to 4.4.1